


Mounting Description Brake

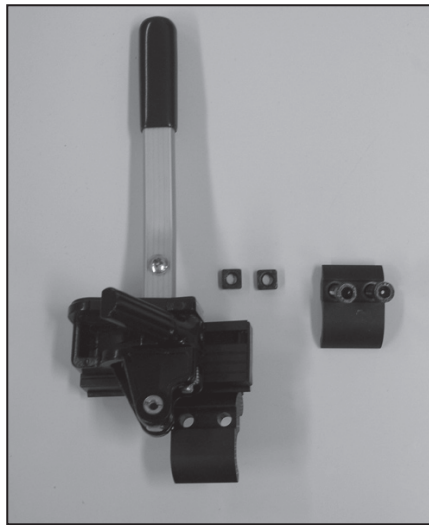

Tools: 5mm Allen key

1. Place the brake clamp on the top frame tube. Insert the square nuts into the trace of the brake clamp.
2. Mount the other clamp half by fixing the screws to the square nuts.
3. There should be a distance of app. 15mm between the brake and the main wheel in open position.
4. Push the handle forward to activate the brake.
5. Pull the handle rearward to open the brake.

